



## Scope

This white paper provides a process to set up a remote connection to the Silver Series OIT.

## Process

A user can operate a system remotely by enabling the VNC server in the Silver Series OIT and viewing and operating the Silver Series OIT with the VNC Client running on a computer.


1. At [www.realvnc.com](http://www.realvnc.com) and download the free version of VNC.
2. Install the VNC program on your computer. (Only the VNC Viewer is required).
3. Apply power and connect HMI to network.
4. Find the OIT's IP address by clicking on  to open the task bar. Then click on  to enter settings. Enter the password (default is 111111).
5. Write down the IP address, you will need it later. The IP address is display in dialog shown below.



6. Click the VNC server setting tab (second to the last).



7. Click Start VNC

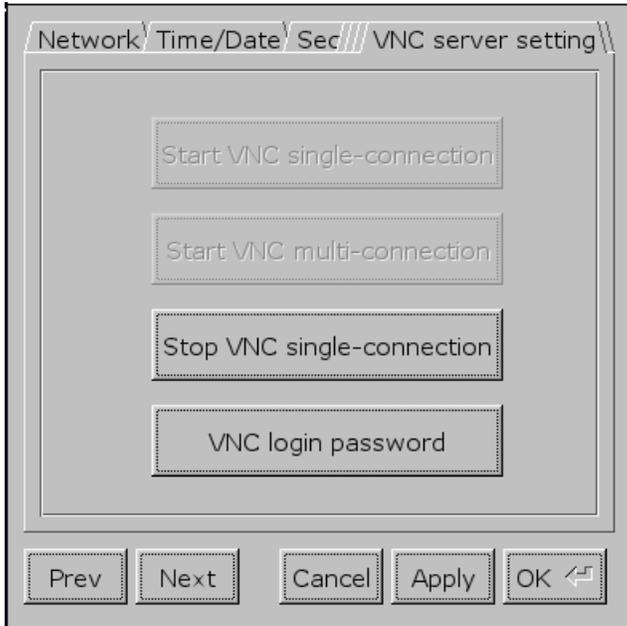

8. Click Apply

9. Click OK.


10. Launch the VNC Viewer on the computer.

11. For Server, enter the OIT's IP address.



12. Click OK.

13. Enter the OIT's password. (default is 111111)

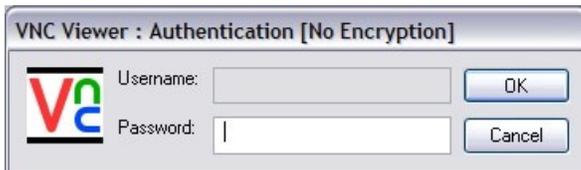

14. Click OK. The VNC client window opens displaying the OIT's screen.